

PM7510-R0

XGS-PON Bridge ONT with 10G LAN

Package Contents





Power

Adapter



Ethernet



Quick Start Guide

Cable Guide

See the User's Guide at www.zyxel.com for more information, including customer support and safety warnings.

US Importer

Zyxel Communications, Inc 1130 North Miller Street Anaheim, CA 92806-2001 https://www.zyxel.com/us/en/

Copyright @ 2022 Zyxel Communications Corp. All Rights Reserved.

Quick Start Guide


Hardware Connections






Warning! Do NOT remove the PM7510-R0 from the fiber box or open the fiber box. Opening the fiber box could damage the fiber optic cable. ONLY qualified service personnel should service or disassemble the PM7510-R0 and fiber box. Contact your ISP for further information.

PM7510-R0 installed on the fiber box

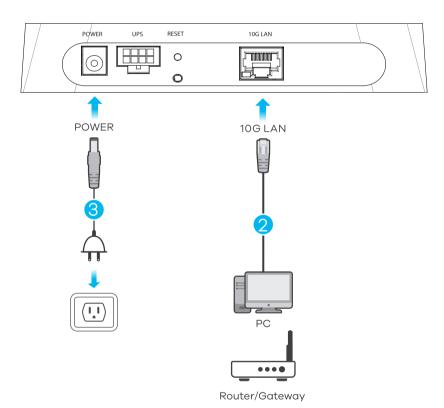

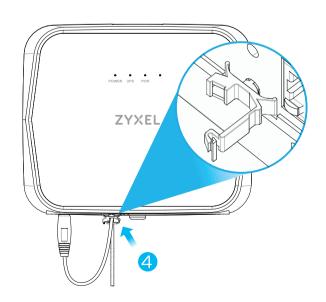

- 1 Find the PM7510-R0 installed by the ISP on the fiber box.
- Connect a computer, router, or gateway to the 10G LAN port using the white Ethernet cable.
- (3) Use the included power adapter to connect the power socket to a power outlet.
- Press the cable clip to open it. Close it around the power adapter cable to prevent accidental unplugging.

POWER	Green Red Off	On - Device is turned on and has finished booting. Blinking - Starting up. On - System failure. Blinking - Firmware upgrading. Not receiving power.
UPS	Green Off	On - The AC power is off and the UPS (battery backup) is providing power normally. Blinking - The battery is working abnormally, such as the voltage going outside the expected range. The battery is not in use or cannot recharge.
PON	Green Red	On - PON link to the OLT is up. Receiving an optical signal of normal strength. Blinking - Trying to establish a link to the OLT. On - PON link to the OLT is down. Blinking - The received optical signal is too weak.
10G LAN	Located on the Ethernet connector. Green On - Ethernet device connected. Green Blinking - Traffic. Off No Ethernet device connected.	

1/1